



- ↔ Entry & Exit to +ve Pressure Area
- ➔ Entry & Exit to -ve Pressure Area

--- indicates most negative &
 +++ indicated most positive

* All the rooms have to be maintained at Class 10000